

GRILL FAN MODEL GF-01

BATTERY REPLACEMENT

Remove the battery cover by unscrewing the knob at the back of the unit (see Fig.1) and replace the new batteries (4 x 1.5V AA heavy duty battery). Make sure the batteries are orientated correctly on the positive & negative terminals.



Fig. 1

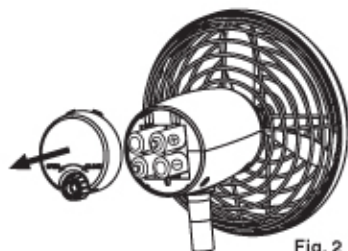


Fig. 2

INSTALLING GRILL FAN

- 1) Do not position the grill fan above fire and/or cooking surface.
- 2) If your grill has a sideburner; you must mount the fan on the side of your grill opposite the sideburner. If your grill does not have a sideburner; you may mount the fan on either side of your grill.

USE AND CARE

- 1) Store grill fan indoors when not in use.
- 2) The grill fan can be cleaned by gently wiping with a damp cloth. DO NOT IMMERSE IN WATER.
- 3) Remove batteries if grill fan is to be unused for two weeks or more as batteries could leak.
- 4) Do not incinerate, compact or disassemble batteries.
- 5) Recycle batteries whenever possible. If recycling is unavailable in your area, dispose of old batteries in accordance with local regulations.

Caution

**Do not put the Grill Fan on top of fire.
This is not a toy, keep out of reach of children.**